SAMSUNG

WASHING MACHINE

WA75U3

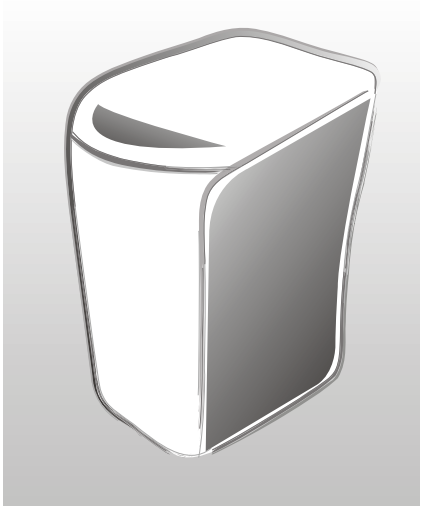

Please read this manual before using and note how to use in the proper manner.
Please be careful of keeping tile manual.
Otherwise, it should be bought separately.

FEATURES	**1**
SAFETY INSTRUCTIONS	**2**
DESCRIPTION OF PARTS	**3**
CONTROL PANEL	**4**
WASHING PROCEDURE	**5**
Fuzzy course	5
Speedy course	5
Baby course	5
Wool course	6
Mist shower course	6
Delay start course	6
Air turbo course	6
MANUAL FUNCTION	**7**
INSTALLATION & MAINTENANCE	**9**
Environment	9
Levelling	9
Connecting the water supply hose	9
Assembling the rat protection panel	10
How to put the detergent in	10
Water supply connector filter	10
Cleaning the filter net	10
Connecting the drain hose	11
Cleaning the filter net	11
TROUBLESHOOTING	**12**
SPECIFICATIONS	

The User's Manual is for common use.
Make use of the User's Manual depending upon your washing machine model.

FEATURES

AIR TURBO COURSE

- For clothes: Reduces the time for drying in the sun;
- For tub: Keeps mildew from breeding and infecting.

MIST SHOWER COURSE

- Able to dissolve the detergent thoroughly and get the clothes well washed.

WASH+

- Select Washing+ to prolong washing by 5 minutes for those heavy-stained clothes

FUZZY CONTROL

- Fuzzy control operates with best washing course by sensing the washload like artificial intelligence.

STAINLESS STEEL WASHBOARD TUB

- The indented slot design emulates the washboard well and guarantees better cleanliness.

MAGIC FILTER

- As one of Samsung's patents, the unique magic filter ensures that all the lint inside the tubcan be collected and better cleaning results are delivered.

DELAYED START COURSE

- When you have something to do, you can use this course. The washing is finished by the time you reserved. You'd better give the clothes an airing to keep them from being crushed.

SAFETY INSTRUCTIONS

Please note that the following precautions for safety intend to prevent unpredictable danger and damage by helping the proper use in safety.

When using hot water in washing, please make sure that the water should not exceed 50℃.
● Plastic parts may be deformed or damaged, and an electric shock or a fire may take place.

WARNING

There might be serious injury or fatal accident when you violate this instruction.

If the power supply cord or plug is damaged or loosened, do not use.
- An electric shock or a fire may take place.

Do not pull the cord off or touch it with moist hands.
- An electric shock or a fire may take place.

Do not bend the power supply cord by force or press it with heavy things.
- An electric shock or a fire may take place.

Do not install the washer nearby electric implement or don't put a candle light or cigarette light on the washer.
- A fire may take place.

Do not disassemble, repair or remodel it recklessly.
- When you need to repair it, please call service agent. An electric shock or a fire may take place.

During operation, do not put your hands or metal materials under the washer.
- You may be hurt by spinning board beneath the washer.

Stay away from the washer when the bottom of the washer sinks into the water.
- There might be an electric shock. Please wait until the water drains out completely.

Do not put laundry stained with gasoline, benzene, or alcohol in the washer, and keep the materials away from the washer.
- An explosion or a fire may take place.

During spinning, don't put your hand in the spinning tub.
- It may hurt your hands. If it does not stop within 15 seconds after you open the lid, call service agent immediately.

The washing machine is to be connected to the water mains using new hose-sets and that old hose-sets should not be reused.

After installation. the power play must be eusily accessible.

If the supply cord is damaged, it must be replaced by the manfafurer or its serrce agent or a similarl qualified.

CAUTIONS

There might be a slight injury or damage when you violate this instruction.

Don't' install it in the area with moisture or outdoor where it has rain or snow
- An electric shock or a fire may take place.

Please unplug the power supply cord when you do not use it.
- An electric shock or a fire may take place.

If there is dust or water on the power supply plug and its connected part, please remove it completely.
- An electric shock or a fire may take place.

Do not make your kids look into the inside of the washer.
- If your kid falls into the washer, his life could be in danger.

Ventilate immediately without touching the power plug if gas is leaking.
- An electric shock or a fire may take place if it catches flame.

If the washer makes strange noise, smell or smoke, unplug it promptly and call service agent.
- An electric shock or a fire may take place.

When cleaning, don't spray water to the parts of the washer directly.
- It may make it's life span shorten.
  Also an electric shock or fire may take place

Don't use several appliances together with an outlet.
- A fire may take place due to unusual heat.

Don't press the button with an awl or pin.
- An electric shock or a fire may take place.

DESCRIPTION OF PARTS

Tile User's Manual is for common use.
Make use of the User's Manual depending upon your washing machine model.

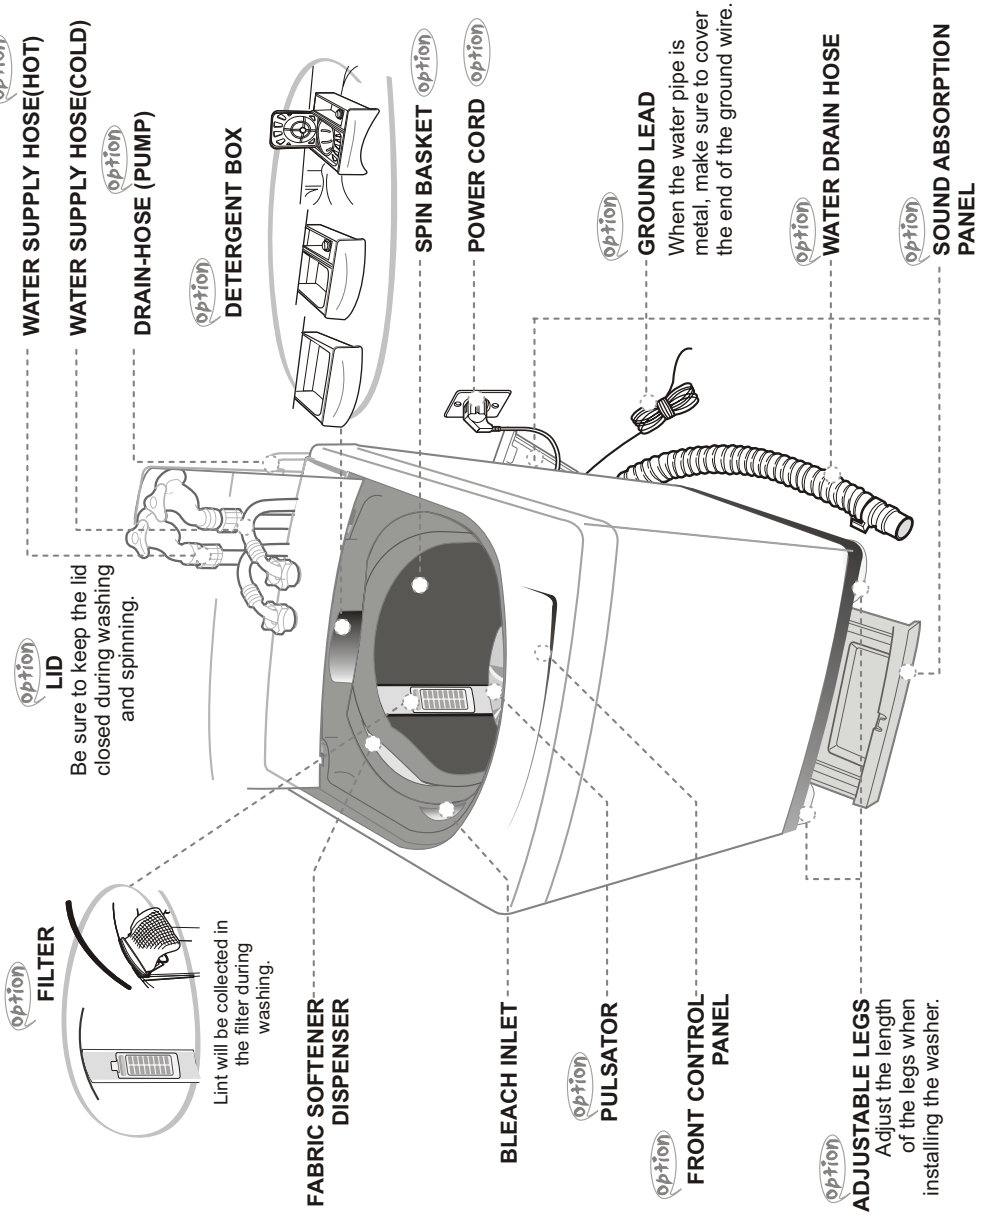
WATER SUPPLY HOSE(HOT)
WATER SUPPLY HOSE(COLD)
DRAIN-HOSE (PUMP)
DETERGENT BOX
SPIN BASKET
POWER CORD
GROUND LEAD
When the water pipe is metal, make sure to cover the end of the ground wire.
WATER DRAIN HOSE
SOUND ABSORPTION PANEL
LID
Be sure to keep the lid closed during washing and spinning.
FILTER
Lint will be collected in the filter during washing.
FABRIC SOFTENER DISPENSER
BLEACH INLET
PULSATOR
FRONT CONTROL PANEL
ADJUSTABLE LEGS
Adjust the length of the legs when installing the washer.

CONTROL PANEL

For more details, see control panel of your washing machine.

Power

➢ POWER BUTTON
Press this button to turn on/off the washer.

Start/Hold

➢ START/HOLD BUTTON
Use to pause and restart the operation.
To change the washing procedure during operation, press this button to stop, and once again to restart after changing the procedure.

Course

➢ COURSE SELECT BUTTON
With every press of this button, the washing course changes ;
FUZZY→SPEEDY→BABY→WOOL →FUZZY

Function

➢ FUNCTION SELECT BUTTON
With every press of this button, the function changes ; WASH, RINSE, SPIN → WASH, WASH+, RINSE, SPIN→SOAK, WASH, WASH+, RINSE, SPIN→SOAK, WASH, RINSE, SPIN →WASH→RINSE→SPIN→WASH, RINSE→RINSE, SPIN →WASH, RINSE, SPIN

Water Level

➢ WATER LEVEL SELECT BUTTON
According to the wash load, select the water level ;
MEDIUM→HIGH→MAXIMUM→HIGH→MEDIUM→LOW →EXTRA LOW→LOW→MEDIUM

Delay Start

➢ DELAY START BUTTON
Press this button when delay start washing is needed.
Delayed time ranges from 3 to 18 hours.

Air Turbo

➢ AIR TURBO SELECT BUTTON
Press down this button to select air turbo course ;
CLOTHES AIR TURBO→TUB AIR TURBO

Mist Shower

➢ MIST SHOWER BUTTON
Press this button to select the mist shower course.
(Press course button again to cancel this application)

➢ REMAINING TIME INDICATOR LIGHT
The indicator light shows the remaining time (in minutes) of each wash cycle.
At the end of the cycle, the power automatically switches off.

➢ FUNCTION INDICATOR LIGHT
Every function period will be indicated in flashing mode.

WASHING PROCEDURE

Before starting washing, check the following;
Connect the water supply hose to the water tap. Leave a tap open. Plug the power cord in. Make sure to lay down the drain hose. (In case no drain pump)

Put the laundry into the washer and add detergent, too.
Be careful not to overload. Use right detergent for the fabrics you are washing.

➢FUZZY COURSE

Selects the best washing course automatically.

1.Press the POWER button to "ON".
2.Press the START/HOLD button.
Water level is selected automatically.
Washing, rinsing and spinning follow.
If you want to pause, press the START/ HOLD button again. You can change the course when paused.
3.Close the lid.

➢SPEEDY COURSE

Because washing is speedy, it is good for light or less stained laundry.

1.Press the POWER button to "ON".
2.Press the course select button once.
3.Press the START/HOLD button.
Water level is selected automatically.
Washing, rinsing and spinning follow.
If you want to pause, press the START/ HOLD button again. You can change the course when paused.
4.Close the lid.

➢BABY COURSE

This course can keep the children's skin from being hurt by detergent.

1.Press the POWER button to "ON".
2.Press the course select button twice.
3.Press the START/HOLD button.
Water level is selected automatically.
Washing, rinsing and spinning follow.
If you want to pause, press the START/ HOLD button again. You can change the course when paused.
4.Close the lid.

➢ WOOL COURSE

Only high or medium water level is available.
Please use cold water.

1.Press the POWER button to "ON"
2.Press the course select button three times.
3.Press the START/HOLD button.
Washing, rinsing and spinning follow.
If you want to pause, press the START/ HOLD button again. You can change the course when paused.
4.Close the lid.

CAUTION...
-Do not use water above 30℃ for WOOL washing.
-Refer to the tag attached on the clothes for washing information.
-Fasten buttons and turn inside out before washing.
-Use the detergent indicated in the laundry.
-When the degree of dirt is extreme, soak the laundry in warm water for about 10 minutes before pressing the WOOL course button in order to enhance washing efficiency.

WASHING PROCEDURE

➢MIST SHOWER COURSE

Dissolve the detergent thoroughly and get the clothes well washed.

1.Press the POWER button to "ON".

2.Press the MIST SHOWER button once.

3.Press the START/HOLD button.

Water level is selected automatically.
Washing, rinsing and spinning follow.

4.Close the lid.

CAUTION...

-If you want to cancel the mist shower course, press COURSE button again to change the washing procedure.

➢DELAY START COURSE

Select this course when you have to go out or do something else.

1.Press the POWER button to "ON".

2.Press the DELAY START button once.

You may change the delay start time with use the DELAY START button.(from 3 hours to 18 hours)

3.Press the START/HOLD button.

Put the proper amount of detergent into the detergent box.

4.Close the lid.

The washing finishes by the time you reserved.

➢AIR TURBO COURSE

Reduce the time of drying outside in the sun and keep mildew from breeding and infecting within the spin tub.

1.Press the POWER button to "ON".

2.Press the AIR TURBO button.

Select air turbo for clothing or tub

3.Press the START/HOLD button.

Water level is selected automatically.
Washing, rinsing and spinning follow.
If you want to pause, press the START/ HOLD button again. You can change the course when paused.

4.Close the lid.

CAUTION...

- The air turbo functions have the following courses: FUZZY, SPEEDY, BABY, MIST SHOWER .

- In manual functions (see P7, P8), for the functions without spin course, the air turbo function can no be selected, i.e. WASH, RINSE, WASH & RINSE

- It's forbidden to air turbo such clothing listed below: Clothing stained with gas, coal oil, alcohol or solvent should not be washed or spun in this machine, especiallyforbidden for air turbo. (May have danger of causing fire or explosion)

- Clothing unsuitable forair turbo :

- *Quilt, carpeting*
- *slender wool fabrics, eiderdown clothes, clothing with ornament or brooch.*
- *Shoes*
- *Clothing tends to fade*
- *Clothing tends to deform*

MANUAL FUNCTIONS

Each washing course changes manually.
Ex) If you want to wash in the speedy course: Power - Select speedy course - Wash - Start/Hold button

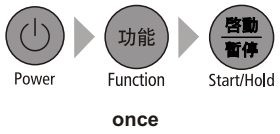

once

WASH, WASH+, RINSE & SPIN

Press the POWER button.
Press the FUNCTION SELECT button once.
Press the START/HOLD button once.
Washing, rinsing, spinning follow.
When the FUNCTION button is pressed during working, the rinse times can be changed to between 1 and 5 times in duration.

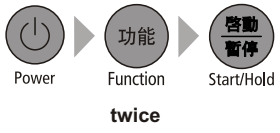

twice

SOAK, WASH, WASH+, RINSE & SPIN

Press the FUNCTION button twice.
Press the START/HOLD button once.
Washing, rinsing, spinning follow.
When the FUNCTION button is pressed during working, the rinse times can be changed to between 1 and 5 times in duration.

three times

SOAK, WASH, RINSE, SPIN

Press the FUNCTION button three times.
Press the START/HOLD button once.
Washing, rinsing, spinning follow.
When the FUNCTION button is pressed during working, the rinse times can be changed to between 1 and 5 times in duration.

four times

WASH ONLY

Press the FUNCTION button four times.
Press the START/HOLD button once.
When the FUNCTION button is pressed during washing, the wash time can be changed to between 3 and 25 minutes in duration..

five times

RINSE ONLY

Press the FUNCTION button five times.
Press the START/HOLD button once.
When the FUNCTION button is pressed during rinsing, the rinse times can be changed to between 1 and 5 times in duration.

MANUAL FUNCTIONS



six times

SPIN ONLY

Press the FUNCTION button six times.
Press the START/HOLD button once.
When the FUNCTION button is pressed during spinning, the spin time can be changed to from 5 to 11 minutes.

seven times

WASH AND RINSE

Press the FUNCTION button seven times.
Press the START/HOLD button once.
Washing, rinsing follow.
When the FUNCTION button is pressed during working, the rinse times can be changed to between 1 and 5 times in duration.



eight times

RINSE AND SPIN

Press the FUNCTION button eight times.
Press the START/HOLD button once.
Rinsing, spinning follow.
When the FUNCTION button is pressed during working, the rinse times can be changed to between 1 and 5 times in duration.

INSTALLATION & MAINTENANCE

The User's Manual is for common use.
Make use of the Uer's Manual depending upon your washing machine model.

ENVIRONMENT
Leave some space
Maintain at least 10cm between the washer and the wall.
Place the washer on a sturdy flat surface.
If the washer is placed on an uneven or weak surface, noise or vibration occurs. (Allowable is 1°)
Adjust the legs for even placement.

Never install the washer near water.
Do not place the washer in steamy rooms or where the washer is directly exposed to rain. Moisture may destroy the electrical insulation causing an electrical shock hazard.
Avoid direct sunlight or heaters.
As plastic and electrical components are affected by direct heat, never place the washer near furnaces, boilers, etc. Do not place under direct sunlight.

➢ LEVELLING

• If the washer is not leveled with the ground, it makes the machine tremble more or be out of order. So, make sure that the washer is leveled properly.

SEE IF THE MACHINE IS PLACED LEVEL BY CHECKING THE POSITION OF THE WASHING TUB.

- Open the lid of the machine, pour water into the tub up to the level just below the pulsator, and adjust the legs so that the pulsator is positioned at the center of the water as shown in the figure.
- Place the machine more than 10cm away from the wall.
- Adjust the legs on feet for levelling.

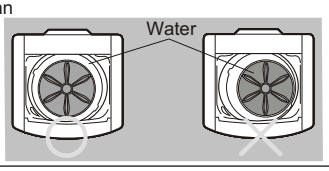

1. Adjust the side horizontally first and the front in same direction ② next.

option

2. If the thread is not within the limit, adjust the height of the legs.

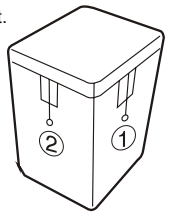

➢ CONNECTING THE WATER SUPPLY HOSE

1. Remove the adaptor from the water supply hose.

2. First, using a "+" type screw driver, loosen the four screws on the adaptor. Next, take the adaptor and turn part(b) following the arrow for gap about 5mm between them.

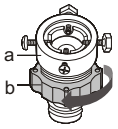

3. Connect adaptor to the water tap by tightening the screws firmly. Then, turn part (b) following the arrow and put (a) and (b)together.

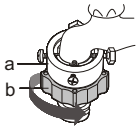

4. Connect the water supply hose to the adaptor. Pull down the part (c) of the water supply hose .When the part (c)is released, the hose is automatically connected to the adaptor making a 'click' sound.

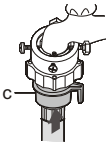

option

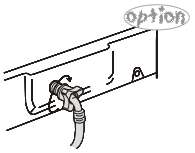

5. Connect the other end of the water supply hose to the inlet water valve at the back of the washer. Screw the hose clockwise all the way in.

option

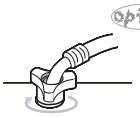

5-1.Connect the other end of the water supply hose to the inlet water valve at the top of the washer.
Screw the hose clockwise all the way in.

option

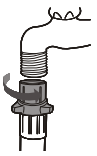

If the water tap is a screw type, assemble a water supply hose that fits to the tap as shown.

NOTICE *After completing connection, if water leaks from the hose, then repeat the same steps.*
Use the most conventional type of faucet for water supply
In case the faucet is square or too big, remove the spacing ring before inserting the faucet into the adaptor.

➢ ASSEMBLING THE RAT PROTECTION PANEL option

Tilt the washer a little and lift up the panel until it clicks, finally fix the panel with screw to the base as shown in the figure.

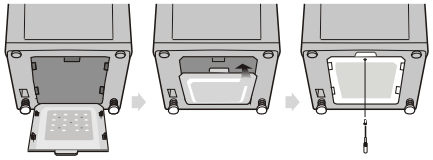

1.Insert the sound absorbing panel to the assembling hole on back side to the end.

2.If you have difficulty inserting the panel lift up the washer a little and insert it

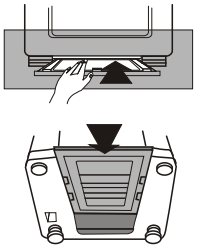

➢ HOW TO PUT THE DETERGENT IN option

1 .Open the detergent box by pulling in the direction of the arrow as shown in the figure and then put the powder detergent in the detergent box.

2. Put in one-time amount of detergent evenly so the detergent may not brim over the box.

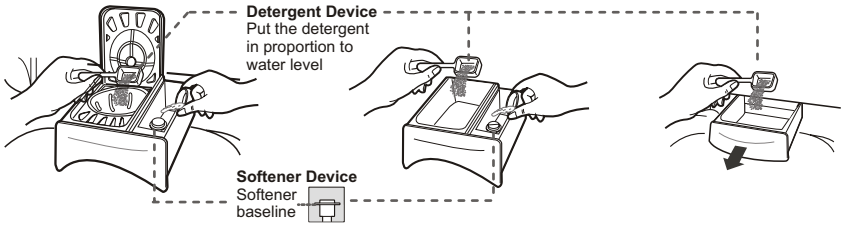

CAUTION: If softener is stored over the above base line, it may flow down at any time.

➢ WATER SUPPLY CONNECTOR FILTER

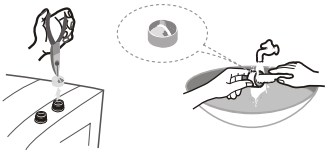

1.Pull out the filter and wash well.

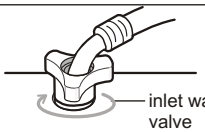

2. Pull in the filter and connect the hose to the inlet water valve tightly.

3. Check if there is a leakage. Note to tighten up the connector.

➢ CLEANING THE FILTER NET Clean the filter net often to keep the washer clean.

Take the filtering net out downwards, then open the net and take off the lint. Rinse the net with clean water and remount it onto the washer finally.

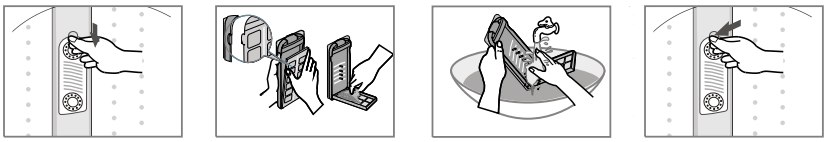

➢ CONNECTING THE DRAIN HOSE

The drain hose is normally connected on the right side of the machine. Consumers can refit it on the bit if necessary.

NOTICE:
Before refit, the power supply must be cut of (For the danger of getting an electric shock)

1. ①Remove the screws and take down the back cover.
   ②Remove the screws,and take down the left cap.

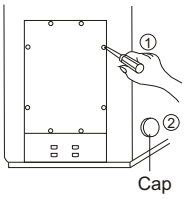

2. The removal of the linking pipe
   ①Remove the screws on the drain mouth, then press the linking pipe and take down the drain mouth from the shell of the box.
   ②Pull up the fixed part to make it apart from the shell.

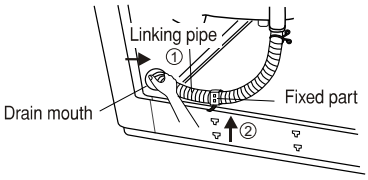

3. The installation of the linking pipe
   ① Press the linking pipe then insert the drain mouth into the box shell and fix it with the screws.
   ②Press the fixed part then insert into the hole in the middle of box.

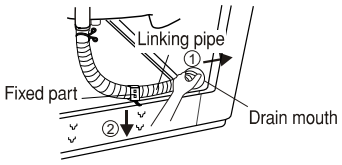

4. ① Fit the back cover.
   ② Aim the cap at the cavity in the shell of the box then fix it with the screw.
   ③ Connect the drain hose.

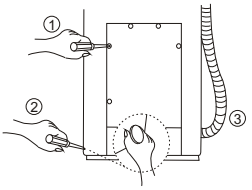

NOTICE:
When inserting the linking pipe, it can't be twisted or tied.
If the linking pipe is wrongly installed, there will be water leaking.

➢ CLEANING THE FILTER NET

Please clean the filter net often: Pull out the filter net in the inlet water valve and clean the dirt on it with a brush. Insert it into the valve after being washed with water.

NOTICE:
The dirt on the filter net will produce some problems, like water not supplied or only little flow of water supplied. After clean it, please be sure to insert the filter net into the valve.

TROUBLESHOOTING

➢ **Washing machine won't work**

Is the water tap opened?
Is the washer plugged in?
Is the power cut off?
Is there enough water?
Is the fuse broken?
Is the START/HOLD button pressed?

➢ **Water dose not drain**

Is the drain hose down?(No pump)
Is the drain hose frozen?
Is the drain hose clogged?
If the water dose not drain in 15 minutes, a buzzer will sound, and the remaining time indicator will show "5E".

➢ **Water is not supplied**

Is the water tap opened?
Is the water cut off?
Is the water supply hose or hose connection clogged?
Is the water tap frozen?
If water is not supplied in I hour, a buzzer will sound, and the remaining time indicator will show "4E".

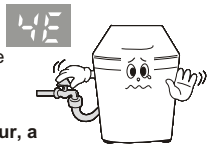

➢ **Spinning does not work**

Is the laundry spread out evenly in the washer?
Is the washer set on a sturdy flat surface?
Is the lid colsed?

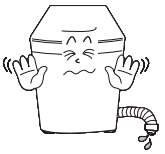

IN CASE THE NEED FOR SERVICING ARISES.

If any problem occurs with your products, do not hesititate to call any nearby.
Name, address, telephone number is required.

SPECIFICATIONS

POWER CONSUMPTION	330W		
DIMENSIONS(mm)	W530 × D535×H880		
MAXIMUM MUSS OF DRY CLOTH	5.5 kg		
WEIGHT	31 kg		
STANDARD WATER LEVEL	MAXIMUM	57 *l*	53 *l*
	HIGH	50 *l*	46 *l*
	MEDIUM	43 *l*	39 *l*
	LOW	33 *l*	30 *l*
	EXTRA LOW	26 *l*	20 *l*
WATER USAGE	140 *l*		
WATER PRESSURE	0.05~0.78 MPa (0.5 ~ 8.0 kg • f/cm^2)		
WASHING TYPE	Stirring Type		

CODE NO.: DC68-02193B